

ALARM SYSTEM Support: Smoke/Heat/CO2

WHAT YOU NEED TO KNOW

You have multiple detectors in your home.

- They are hardwired and ganged together - if one detector alarm goes off, all will go off for heat, smoke or CO issues.
- They also have a voice feature, which identifies each detector.
- Every detector has backup batteries and each unit will chirp individually if battery needs to be replaced.

You should have an owner's manual for each detector model - if not, you can find all the information at www.firstalert.com.

DETECTOR SPECIFICS All units are First Alert brand.

A) Smoke Detector #7010b or 7020b (Uses one 9volt battery).

There are one of these in the Front Hall and in each Bedroom.

B) Smoke & Carbon Monoxide Detector #SC7010BV (Uses two AA batteries). There are one of these on each floor: Basement, Kitchen area and 2nd Floor Landing.

C) Heat Alarm #HD6135FB (Uses one 9volt battery). There is one of these, installed high up on your Garage ceiling.

WHAT YOU SHOULD DO:

Suggested maintenance according to the manual, page 6:

- 1) **Test** the batteries weekly by pressing the test button
- 2) **Clean** the detector monthly by using the brush attachment of your vacuum – never use water.
- 3) **Replace the backup batteries** (at least annually, although many suggest twice a year, when you change clocks.)

NEED HELP? The Vendor Listing identifies neighbor-recommended "Handymen" who change batteries. Bob Gratzner, for example, does it for \$25 (you supply the batteries) 617.605.6315

 
WHAT YOU MIGHT HEAR Familiarize yourself with page 5 of the manual for complete detail of each instance summarized below:

Normal Operation - Voice & Horn: *silent*; Power/Smoke LED: *constant green*; CO2 LED *off*.

Battery Low - Voice: *replace batteries in (location), repeats every 5 hours*; Horn: *chirps once a minute*; Power/Smoke LED: *flashes green*; CO2 LED *off*.

Smoke Detected - Horn: *3 beeps (pause) repeats eight times*; Voice: *warning evacuate smoke in (location)*; Horn: *3 beeps (pause) repeats three times*; Power/Smoke LED: *flashes red in sync with horn*; CO2 LED *off*.


CO2 Detected - Horn: *4 fast beeps (pause) 4 fast beeps*; Voice: *warning evacuate carbon monoxide in (location)*; Horn: *4 beeps (pause) 4 beeps (pause) repeat two times*; Power/Smoke LED: *off*; CO2 LED: *flashes red in sync with horn*.

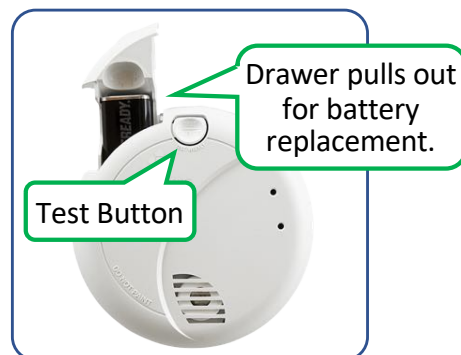

A) Smoke Detector



 B) Smoke & CO2 Detector

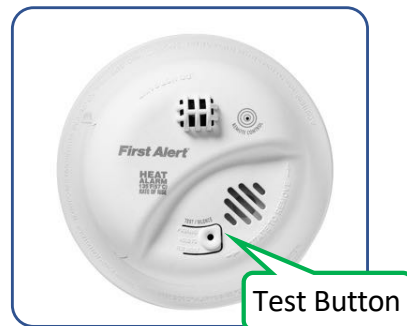

C) Heat Alarm

NOTE: These detectors have an 8-10-year life, after which they will stop working and emit warning signals. At that point you can disconnect them from the base plate and find a replacement at your local hardware dealer.



Prepared by the Summer Reach Homeowners Maintenance and Repair Support Club.

The user recognizes that this information has been created by their neighbors on a voluntary basis and is not intended to supersede any information in their owner's manual regarding maintenance or service. The List of Providers is for advisory purposes only and in no way should be construed as warranty or guarantee. User assumes all responsibility to determine the fitness of the service provider for their particular task. Version 03.15.2021.